


PC TELELINE™ INSTALLATION MANUAL

Requires telephone line with caller I.D.

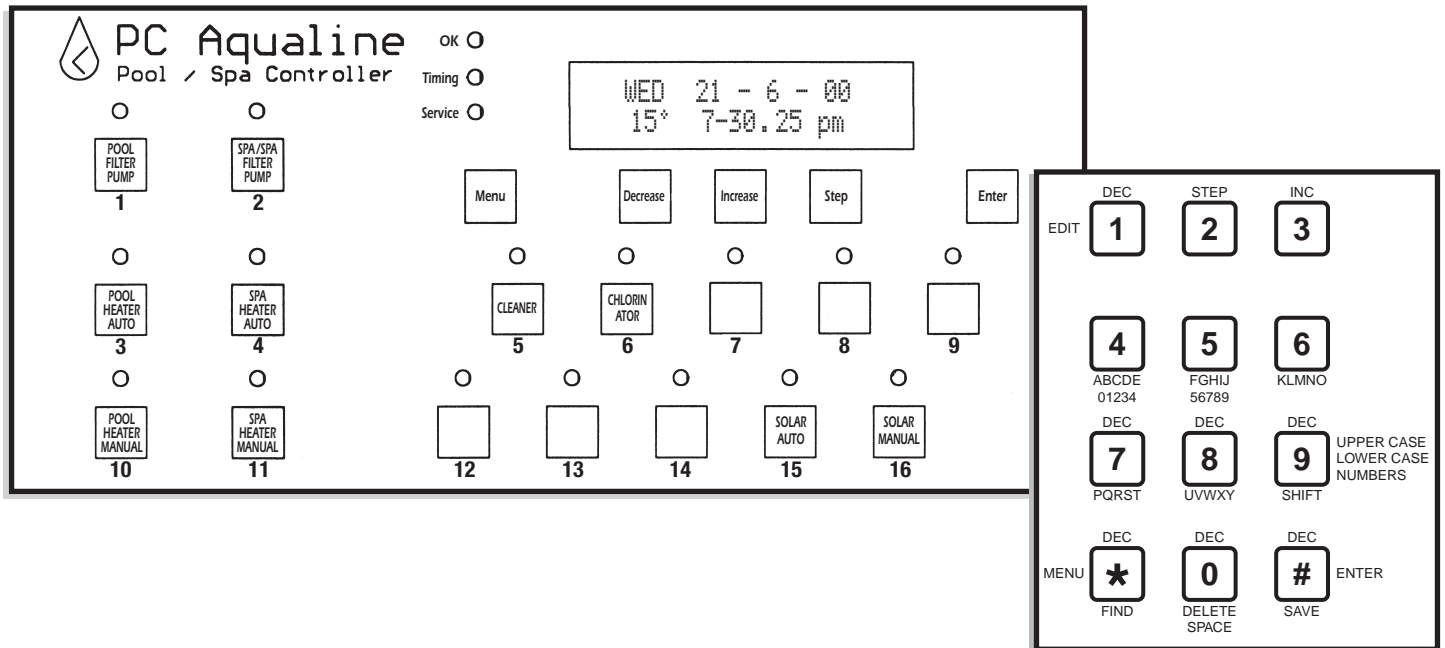

1 Install the teleline interface module near the telephone socket. Please insert the Telecom plug into the line socket after the main control cable is connected and OK light is flashing. Also remove Telecom plug before disconnecting main control cable. The flashing OK LED means communication within house panel. STEADY LED means failure to start up. Remove and disconnect control cable.

2 Wire the Modular 4 wire cable to the socket. Control on back of unit to the 4 wire circuit of the in-house panel.

Modular wiring	In-house panel
Red + positive	Red + positive
Green TX	Blue TX
Yellow RX	White RX
Black – negative	Black – negative

3 Install the modular cable to the socket marked line on back of module to the telephone socket.

4 Unit operates the same as in house panel.

5 Press menu button 3 times and display will read home and away. Press enter when leaving home and press menu when home. When enter has been pressed display will read “away from home call answer on”.

6 Press menu to step to

1. Enter date time
2. Press enter to edit phone index
3. Press enter to edit labels
4. Press enter to alter main number

5. Press enter to alter AUX number
6. To enter main number to call in from. Press enter and enter the 10 digit number then press enter
7. To enter AUX number
Advance through menu to alter aux number. Press enter and enter the 10 digit number then press enter. Menu returns to “press enter for other functions”.

7 To phone in to operate equipment

1. Dial home number. The “Teleline” will answer with a string of beeps.
2. Press button 1 for pool filter pump, then press # button. Filter pump will turn on, a beep, high pitched, will be heard. Press 1 then # button filter pump will turn off and a low-pitched beep will be heard.
3. Buttons 2 – 9 operate the same 2 – 9 beeps. For button 10 – 0 + # button to be pressed again.
4. For buttons 11 – 16 press 1 then 2nd digit plus # button, 11 beeps will be heard. The same for turning off equipment.
5. There is a 10 second delay between each function. Button pressed or call will be disconnected.
6. To finish call press # or just hang up.
7. If a telephone answering machine is connected to house phone line set answer machine to 5 rings before operation.

8 The AUX number can be changed from a remote location. Upon answer a string of beeps will be heard. Press * button. A single high-pitched beep will be heard. Enter new 10 digit number but after each digit wait for a single low beep. If not received after 4 seconds press digit again then wait 1 sec to send next digit. After 10 digits have been entered an answer tone will be heard indicating a successful number change. Press # to end call. The progress of the number change can be observed at the mobile or handset phone with I.D.